


assembly instructions

WALLCOVERING

Acoustic Wall Panels

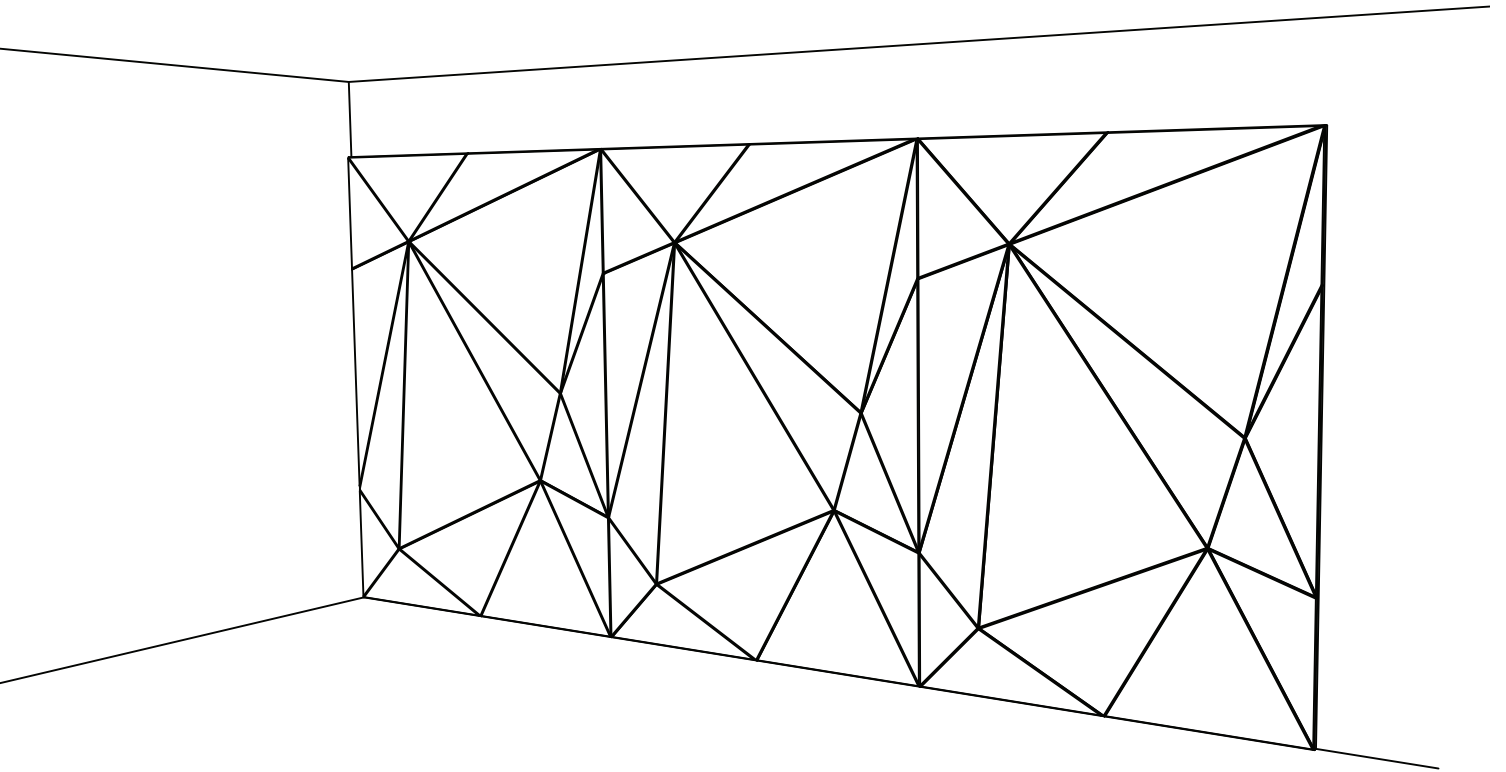


Wallcovering

assembly instructions


1.

We recommend our spray contact adhesive for mounting the wallcovering elements. For this purpose, the adhesive is applied crosswise at a distance of approx. 200 mm, for example vertically on the wall and horizontally on the panel. A light film of adhesive is sufficient.

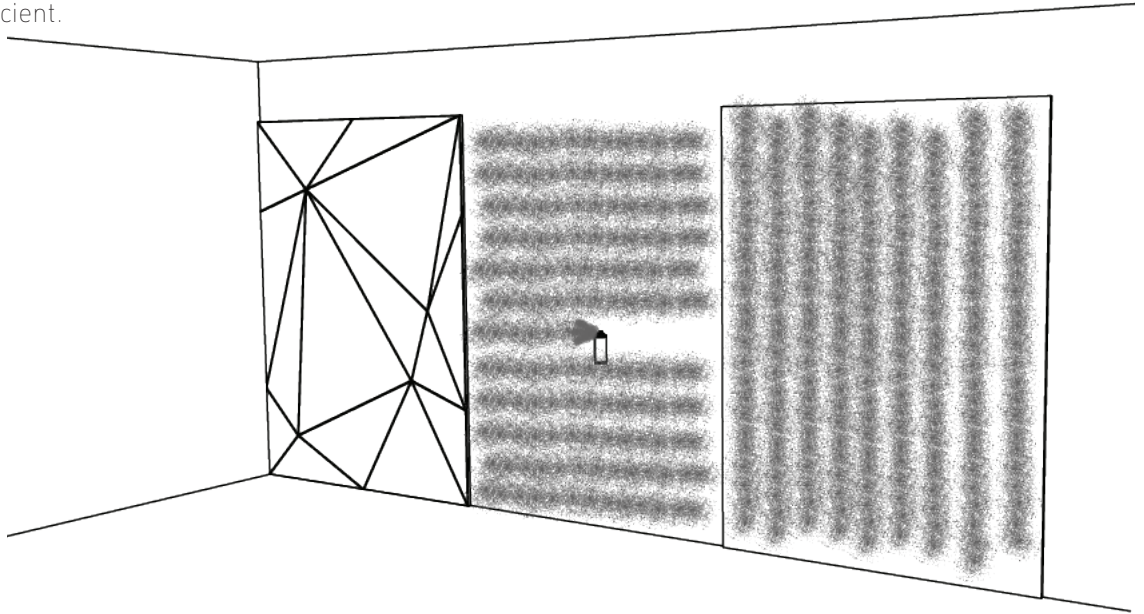

2.

Align the element and press it against the wall for a few seconds over the entire surface, if possible.

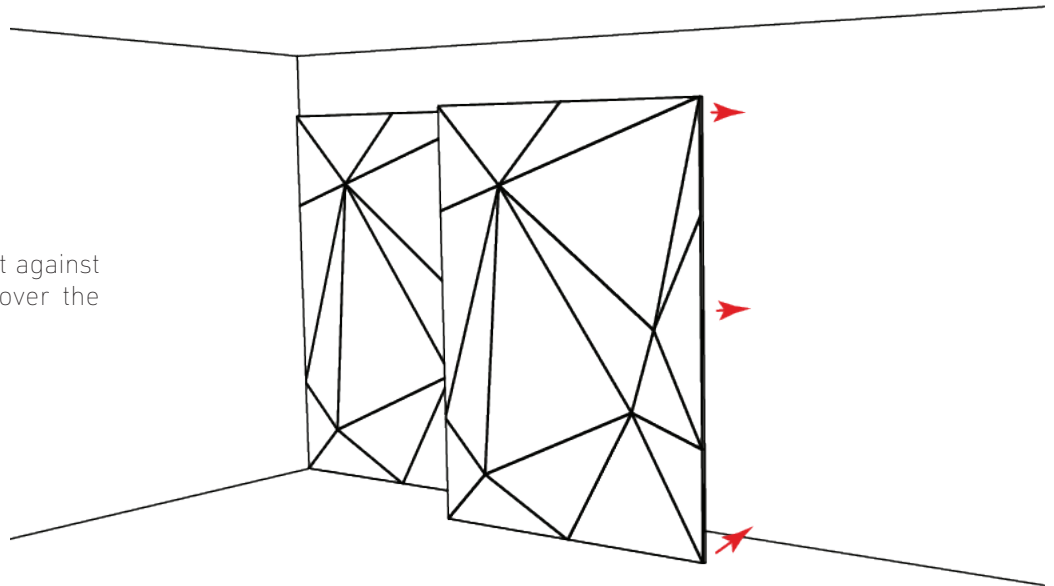

Tip

The Wallcovering Vertigo elements can be shortened or joined together in the V-cut without the joint being visible. This means that smaller off-cuts can also be used for the next wall.